

CONNECTORS & STATUS LEDs

RS-232 Pin Assignments:


DB 9M

RS-232 Cable Wiring

DB9		RS-232 (Device)	
1	DCD+	1	DCD
2	RXD	2	RXD
3	TXD	3	TXD
4	DTR	4	DTR
5	GND+	5	GND
6	DSR+	6	DSR
7	RTS	7	RTS
8	CTS	8	CTS


9 Pin Serial Connector			
Pin	Signal	Pin	Signal
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	+5V
5	GND		

USB 2.0 A-Plug:



USB 2.0 A-Plug			
Pin	Signal	Pin	Signal
1	VCC	3	DATA+
2	DATA-	4	GND

Status LEDs:

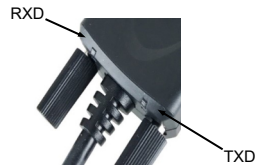

HARDWARE INSTALLATION

Because there are large differences between PC's, we can give you only a general installation guide for the EX-1311-2-5V. Please refer your computers reference manual whenever in doubt.

1. Connect the EX-1311-2-5V USB to the USB A-Port at the your PC.
2. If you would like to screw the serial cable to the 9 Pin connector of the EX-1311-2-5V, then unscrew the screws (see Picture 1) and screw the supplied hexagon nuts into the holes on the EX-1311-2-5V (see Picture 2). Now you can attach the serial cable to the EX-1311-2-5V.

Remove the Screws



Picture 1

Insert the Hexagon Nuts



Picture 2

3. When you are ready you can start your PC and continue with the point „Driver Installation“.


DRIVER INSTALLATION

Windows

After the hardware installation Windows will recognize the device automatically and install the drivers. If the driver should not be installed automatically, please download the driver from our homepage (www.exsys.de / www.exsys.ch) first. Now select the folder with your operating system and install the driver. Follow the hardware assistant and finish the installation. **Important!** Restart your PC in any case after installing the drivers.

CHECK INSTALLED DRIVER

Open the **>Device manager<**. Now you should see at **„Ports (COM & LPT)“** and **„USB-Controller“** the following new entry:

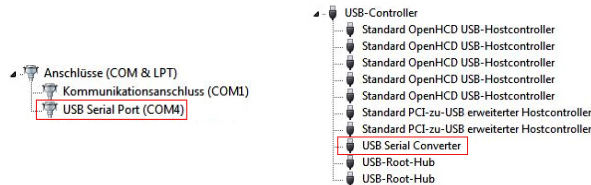

If you see this or a similar information the device is installed correctly.

CLEANING

To clean the unit, use only a dry, lint-free cloth and apply light pressure to remove dirt. Be careful not to leave any fibres of the cloth in the connector area. **Never use a damp or wet cloth for cleaning!**

Germany:
EXSYS Vertriebs GmbH
Industriestrasse 8
61449 Steinbach
www.exsys.de

Switzerland:
EXSYS Vertriebs GmbH
Dübendorferstrasse 17
8602 Wangen wwu.
exsys.ch

Italy:
EXSYS Italia Srl
Via Belvedere, 45/B
I-22100 Como
www.exsys.it



Anleitung

Vers. 1.2, 19.05.2026

AUFBAU



USB 2.0 A-Stecker zum Anschluss an PC

S1: 9 Pin Stecker Seriell RS-232

BESCHREIBUNG & TECHNISCHE DATEN

Der EX-1311-2-5V ist ein Konverter zur Umsetzung von USB 2.0 auf eine RS-232 Schnittstelle mit FIFO 16C550 Port für den Anschluss von High Speed Seriellen RS-232 Peripherie Geräten (z.B. Modem, Plotter usw.). Der EX-1311-2-5V ist mit eine USB 2.0 A-Stecker zum Anschluss an den PC und einer RS-232 seriellen 9 Pin Stecker ausgestattet. Der USB Konverter ist Hot Plug & Play fähig. Für die Einstellungen der I/O Adressen und Interrupts sind keine Jumper und Einstellungen notwendig, da die Einstellungen automatisch vom System BIOS und bei der Installation des Betriebssystems vorgenommen werden. Der EX-1311-2-5V stellt Ihnen +5V auf Pin 9 zur Verfügung.

Kompatibilität: USB 1.1 & 2.0
 Betriebssysteme: Windows 9.x / ME / 2000 / XP / Vista / 7 / 8.x / 10 / 11 / Server 20xx / Linux / MAC
 Anschlüsse: 1x USB 2.0 A-Stecker, 1x 9 Pin Stecker Seriell RS-232
 Lieferumfang: EX-1311-2-5V, 2x Sechskantmuttern, Anleitung

ANSCHLÜSSE & STATUS LEDs

RS-232 Anschlussbelegung:


DB9M

Verdrahtung RS-232

DB9	RS-232 (Gerät)
1 DCD←	1 DCD
2 RXD←	2 RXD
3 TXD←	3 TXD
4 DTR←	4 DTR
5 GND←	5 GND
6 DSR←	6 DSR
7 RTS←	7 RTS
8 CTS←	8 CTS


9-Pin Stecker Seriell			
Pin	Signal	Pin	Signal
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	+5V
5	GND		

USB 2.0 A-Stecker:



USB 2.0 A-Stecker			
Pin	Signal	Pin	Signal
1	VCC	3	DATA+
2	DATA-	4	GND

Status LEDs:

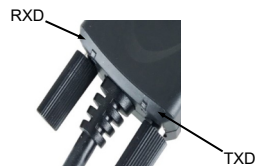

HARDWARE INSTALLATION

Beachten Sie bitte die folgenden Installationshinweise. Da es große Unterschiede zwischen PC's gibt, können wir Ihnen nur eine generelle Anleitung zum Anschluss des EX-1311-2-5V geben. Bei Unklarheiten halten Sie sich bitte an die Bedienungsanleitung Ihres Computersystems.

- Schließen Sie den EX-1311-2-5V an eine USB A-Buchse Ihres PC's an.
- Falls Sie das serielle Kabel mit dem 9 Pin Anschluss des EX-1311-2-5V verschrauben möchten, dann schrauben Sie nun die Rändelschrauben heraus (siehe Abbildung 1) und schrauben Sie hierfür die mitgelieferten Sechskantmutter in die Löcher des EX-1311-2-5V ein (siehe Abbildung 2). Nun können Sie das serielle Kabel an den EX-1311-2-5V befestigen.

Entfernen der Rändelschrauben

Einsetzen der Sechskantmutter



Picture 1



Picture 2

- Jetzt können Sie Ihren PC starten und mit dem Punkt „Treiber Installation“ fortfahren.

TREIBER INSTALLATION


Windows

Nach Abschluss der Hardwareinstallation erkennt das Betriebssystem automatisch den Adapter und installiert diesen! Falls die Treiber nicht automatisch installiert werden sollten, laden Sie bitte als erstes den Treiber auf unserer Homepage (www.exsys.de / www.exsys.ch) herunter. Nun wählen Sie den Ordner Ihres Betriebssystems aus und installieren Sie die Treiber. Folgen Sie den Installationsanweisungen und schließen Sie die Installation ab.

Wichtig! Starten Sie Ihren PC nach der Installation neu.

ÜBERPRÜFEN DES INSTALLIERTEN TREIBER

Öffnen Sie den >Geräte-Manager<. Jetzt müssten Sie unter „Anschlüsse (COM & LPT)“ und unter „USB-Controller“ folgenden Eintrag sehen:

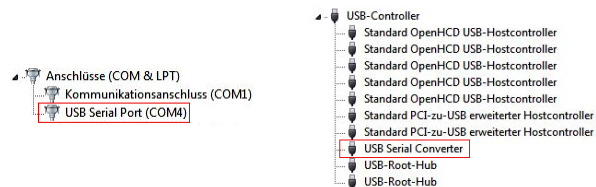

Ist dieser oder ein ähnlicher Eintrag vorhanden, ist die EX-1311-2-5V richtig installiert.

REINIGUNG

Zur Reinigung des Gerätes verwenden Sie bitte ausschließlich ein trockenes nicht faserndes Tuch und entfernen Sie die Verschmutzung mit leichtem Druck. Im Bereich der Anschlüsse bitte darauf Achten, dass keine Fasern des Tuchs in der Buchse hinterlassen werden. **Verwenden Sie bitte zu Reinigung in keinem Fall ein feuchtes oder nasses Tuch!**

Germany:
EXSYS Vertriebs GmbH
Industriestrasse 8
61449 Steinbach
www.exsys.de

Switzerland:
EXSYS Vertriebs GmbH
Dübendorferstrasse 17
8602 Wangen w.w.
www.exsys.ch

Italy:
EXSYS Italia Srl
Via Belvedere, 45/B
I-22100 Como
www.exsys.it



EXSYS

EX-1311-2-5V

Manual

Vers. 1.2, 19.05.2026

LAYOUT



DESCRIPTION & TECHNICAL INFORMATION

The EX-1311-2-5V is a converter for converting USB 2.0 to RS-232 interface with FIFO 16C550 port for connecting high speed serial RS-232 peripheral devices (e.g. modem, plotter etc.). The EX-1311-2-5V is equipped with a USB 2.0 A-Connector for connection to the PC and a RS-232 serial 9 pin connector. The USB converter is hot plug & play capable. No jumpers or settings are required for I/O address and interrupt settings, as the settings are automatically made by the system BIOS and during the installation of the operating system. The EX-1311-2-5V provides +5V on pin 9.

Compatibility: USB 1.1, 2.0, 3.0, 3.1, 3.2
Operating Systems: Windows 9.x / ME / 2000 / XP / Vista / 7 / 8.x / 10 / 11 / Server 20xx / Linux / MAC
Connectors: 1x USB-A Connector, 1x 9-pin serial RS-232 Connector
Extent of delivery: EX-1311-2-5V, 2x Hexagon Nuts, Manual